

## Door Locks

### ■ Locking the vehicle from inside



#### ► Inside lock button

- 1 Locks
- 2 Unlocks



#### ► Door lock switches

Operates all door locks/unlocks.

- 1 Locks
- 2 Unlocks

### ■ Locking the vehicle from outside

Using the entry function or wireless remote control (→P.12, 13)

### ■ Rear door child-protector lock



Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

## Power Windows



### 1 Power window switches

To open: press the switch.

To close: pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

### 2 Window lock switch

The window lock switch disables the operation of passenger and rear window switches.

## Moon Roof (If Equipped)

### Opening and closing

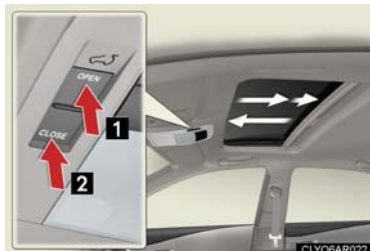

### 1 Opens

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

### 2 Closes

To stop partway, press the switch lightly.

### Tilt up and down



### 1 Tilts up

### 2 Tilts down

To stop partway, press the switch lightly.

## Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

## Back Door

### ■ Back door opener button



To open the back door, push up the opener button and raise the door.

### ■ Power back door switches (with power back door)



#### ► Instrument panel

To open or close the back door, press the switch.



#### ► Back door

To close the back door, press the switch.

#### ► Wireless remote control (→P12)


## ■ Back door closer (with power back door)

---

If the back door is left slightly open, it will close automatically.

## ■ Turning the power back door system on and off (with power back door)

---

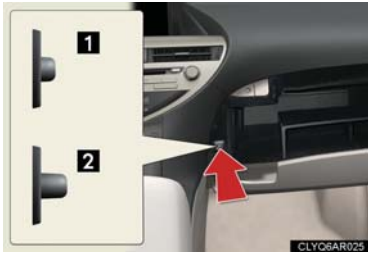

To disable the system, turn off the main switch in the glove box.

- 1** On
- 2** Off

When the power back door system is disabled, the back door cannot be opened using the wireless remote control or power back door switch.